

SpanSet Ltd

Telford Way, Middlewich

Cheshire CW10 0HX

Tel: +44(0) 1606 737494

Fax: +44 (0) 1606 737502

www.spanset.co.uk

01

Height Safety
Lifting
Load Control
Safety Management

SG238 SUSPENSION
TRAUMA RELIEF
STRAPS USER
INSTRUCTIONS



APPLICATION

The SpanSet suspension trauma relief straps, when used in conjunction with a full body harness, are designed to aid in the prevention of suspension trauma after a fall from height has occurred.

WHERE TO INSTALL

The suspension trauma straps should be installed at the junction of the shoulder strap and leg strap of the full body harness as below.



HOW TO INSTALL



Lay the exposed loop from the trauma strap pouch under the harness webbing.



'Choke' the pouch around the webbing and through the loop.



Button pouch around harness Webbing, ensuring the press stud is below the 'choke'.


Repeat the process for the other side of the harness, ensuring one pouch is marked "Hook" and the other pouch is marked "Loop".

USE

Locate, unzip and deploy each case containing the suspension relief straps.



Raise the ends of the two straps to reach the hook and loops. Fit the hook through the loop that will give you the required length and lower the straps.

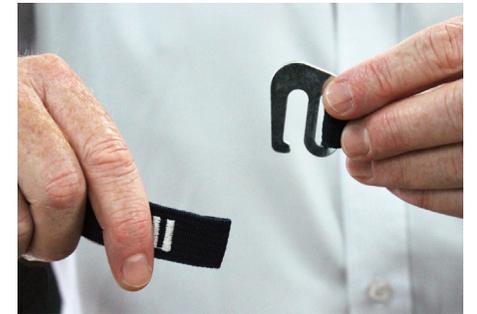

Step onto the strap to relieve the pressure on the legs and groin. Repeat step two and three if the length is not suitable.

